

KORG - Factory Reset, Initialization, Test Mode & ROM Check

Guia consolidada de modelos legacy. Separada por funcion para evitar confundir una combinacion de servicio con una restauracion real de sonidos de fabrica.

ADVERTENCIA

Los modos de inicializacion/test pueden borrar memoria, alterar parametros o dejar el equipo en modo de servicio. Haz copia de seguridad antes de probar combinaciones. Cuando exista una opcion de **Factory Preload/Reset** en menus, esa es normalmente la via preferible para recuperar los sonidos de fabrica.

Tabla consolidada

Modelo	Inicializacion / Test	Factory preload / reset	ROM / version / servicio
01/W Series	Hold RESET + COMPARE while powering on.	GLOBAL screen 7 -> G -> E.	Hold RESET while powering on.
03R/W	Hold EDIT + 1 while powering on.	GLOBAL screen 5D -> OK.	Hold +1 + -1 while powering on.
05R/W	Hold EDIT + 1 while powering on.	GLOBAL screen 5A -> OK.	Hold EDIT + GLOBAL/MULTI while powering on.
168RC	Hold leftmost knob under display + UP + DOWN while powering on.	Factory data via SysEx dump.	Version shown at power-up.
A1	Hold WRITE + -1 while powering on.	Load SPC0A1 card (legacy; card may be unavailable).	-
A2 / A3	Hold CHAIN/EFFECT + B while powering on.	Hold UP + DOWN while powering on; follow display confirmation.	Utility + UP + A (service check; source wording is terse).
A4	Service/source lists initialization as battery removal.	Hold BANK UP + WRITE while powering on; 'PL' appears; press WRITE again.	N/A
A5	Service/source lists initialization as battery removal.	Hold MODE footswitch + WRITE while powering on; press footswitch 1 when prompted.	N/A
AX1000G	Service/source lists initialization as battery removal.	Hold BANK footswitch + EXIT while powering on; press WRITE.	N/A
AX100G	Service/source lists initialization as battery removal.	Hold FX SELECT + EXIT while powering on; press WRITE.	N/A
AX1500G	Service/source lists initialization as battery removal.	Hold BANK footswitch + EXIT while powering on; press WRITE.	N/A
AX1G / AX1B	Service/source lists initialization as battery removal.	Hold LEFT ARROW + '+' while powering on; press '+' again.	N/A
AX300G / AX300B	Service/source lists initialization as battery removal.	Hold PARAM/VALUE + COMPARE/WRITE while powering on; press COMPARE/WRITE again.	N/A
C-Series	SYSTEM -> Disk Utility -> Initialize Execute (model-dependent).	Factory disks: C900 CFD01P; Ci86/9600 CID00PE.	N/A
CX-3	Hold MIDI/TRANPOSE + SPLIT while powering on (service init).	Hold PROGRAM 2 + 7 while powering on.	N/A
D Series	SYSTEM -> Disk Utility -> Initialize Execute.	Restore from backup CDs.	Shown at power-up on documented units.
G3	Service/source lists initialization as battery removal.	Hold BANK + WRITE while powering on; release; press WRITE again.	Hold WRITE while powering on.

Modelo	Inicializacion / Test	Factory preload / reset	ROM / version / servicio
i1 / i2 / i3	Hold EDIT/STYLE + ARRANGE/PLAY while powering on (documented service init).	Disk load: IFD01P (i2/i3), IFD02P (i1).	-
i30	Hold ARR.PLAY + GLOBAL while powering on.	Disk load I30FD00P.	Hold GLOBAL while powering on.
i5S / i5M	Hold ARR.PLAY + GLOBAL while powering on.	Disk load IFD00P.	Hold DISK/GLOBAL while powering on (source grouping).
iS35 / iS40 / iS50 / i40M	Hold ARR.PLAY + GLOBAL while powering on.	Disk load IFDD1006; iS40/i40M use IFDD1007 according to source.	Hold DISK/GLOBAL while powering on.
iX300	Hold ARR.PLAY + GLOBAL while powering on.	Disk load IXD00P.	-
KAOSS Pad	Hold 3 + FX + HOLD while powering on; when 'L' appears enter 1,3,5,1,3,5.	Official KORG preload list: N/A.	N/A
KARMA	Hold ENTER + 0 while powering on.	Factory data via KMFD00P disk.	Hold ENTER + 7 while powering on.
M1	Hold INT + CARD + COMBI while powering on.	Load MPC00P card or SysEx dump.	Hold INT while powering on.
M1R / M1REX	Hold INT + COMBI + PROG while powering on.	Load MPC00P; MPC0EX for EX model.	Hold INT while powering on.
M3R	Hold EDIT + NO while powering on.	GLOBAL screen 5D -> OK.	Hold EDIT + GLOBAL while powering on.
MS2000 / MS2000R	Hold MOD SEQUENCER ON/OFF + 3 while powering on.	GLOBAL screen 2D -> OK.	Hold MOD SEQUENCER ON/OFF + 5 while powering on.
N1 / N5 / EX	Test/init: hold ENTER + 7 while powering on; PAGE> to 'Ready to Boot'; ENTER.	UTILITY -> Factory Reset -> ENTER.	Hold '10s HOLD' + ENTER while powering on (as stated in source).
N1R	Test/init: hold GLOBAL + DEC- while powering on; PAGE> to 'Ready to Boot'; ENTER.	GLOBAL -> PAGE> to Init -> Factory Preload -> ENTER.	Hold EDIT/ENTER + GLOBAL while powering on.
N264 / N364	Hold ENTER + 7 while powering on.	Disk load NSD3.	Hold ENTER + 7 while powering on (source also labels as ROM check).
NX / NS5R	Hold PARAM > + < while powering on.	ENTER -> Utility -> Preset -> Factory Preset -> Yes.	-
PA60 / PA80	N/A in cited service list.	Factory preload from 6-disk set.	Shown at power-up.
Prophecy	Service/source lists initialization as battery removal.	GLOBAL screen 19 -> ENTER.	Hold ENTER + EXIT while powering on.
PX1	Service/source lists initialization as battery removal.	Hold METRONOME + ENTER while powering on; press '+'.	N/A
PX2	Service/source lists initialization as battery removal.	Hold RHYTHM + ENTER while powering on; press '+'.	N/A
PX3 / PX3B	Service/source lists initialization as battery removal.	PX3: RHYTHM/AUX + '+' at power-on, then BYPASS/TUNE. PX3B: HBB + '+', then BYPASS/TUNE.	N/A
PX4 / PX4B	Service/source lists initialization as battery removal.	Hold RHYTHM + UP at power-on; then ENTER/REC.	N/A
S3	Hold STOP + S1 while powering on.	Same combination documented as preload.	Hold STOP + S4 while powering on.
SG Rack	Hold EDIT + YES while powering on.	GLOBAL screen 7 -> OK.	Hold EDIT + FX ON/OFF while powering on.
SGPROX	Hold PROGRAM + PIANO 8 while powering on.	PROGRAM EDIT screen 14 (per-program preload).	Hold PROGRAM + PIANO 7 while powering on.

Modelo	Inicializacion / Test	Factory preload / reset	ROM / version / servicio
SP500	Hold FUNCTION + MIXER while powering on.	FUNCTION screen 7.	Hold FUNCTION + MIXER while powering on.
T Series	Hold FINE + PROG A while powering on.	Disk load TSD00PII.	Hold FINE + PROGRAM A at power-on; source warns this can initialize/erase data.
Trinity Series	Hold ENTER + 0 while powering on.	Disk load TFD00P + TFD01P.	Shown at power-up.
Triton Classic / Studio	Hold ENTER + 0 while powering on.	Classic: TNFD00P + TNFD01P; Studio preload on hard drive.	Hold PARAM < + > while powering on (Classic; source grouping).
Triton LE	Hold ENTER + 0 while powering on.	GLOBAL -> F8 -> Preload -> OK.	Shown at power-up.
Triton Rack	Hold ENTER + 0 while powering on.	Disk load TNRFD00P + TNRFD01P.	Shown at power-up.
TR Rack (TRR)	Hold A4 + EDIT while powering on.	GLOBAL screen 10 -> OK.	Hold ENTER + YES while powering on.
Wavestation WS / WSEX / AD	At boot, when 'Wavestation' flashes: CURSOR DOWN + 4; enter Init screen.	Load WPC00P I/II/III cards.	Service combinations vary; source also lists CURSOR DOWN + BANK + EDIT + YES.
Wavestation SR (WSSR)	Hold CURSOR DOWN + BANK + EDIT + YES; enter Init screen.	Load WPC00P I/II/III cards.	Hold ENTER + 7 while powering on (source line).
X2 / X3 / X3R	Hold PAGE DOWN + 0 while powering on (service guide).	Disk load XSD00P.	-
X5 / X5D / X5DR	Hold PAGE+ + PAGE- while powering on (service guide).	GLOBAL screen 5A -> OK.	Hold EDIT + GLOBAL/MULTI while powering on.
Z1 / Z1EX	Hold SW1 + SW2 while powering on.	GLOBAL mode -> Preload screen.	Hold EXIT + ENTER while powering on.

Lista historica de test mode / combinaciones rapidas

Esta seccion reproduce de forma normalizada la lista comunitaria YAMAHA/KORG/Roland TESTMODE LIST para KORG. No debe asumirse que cada entrada sea un factory reset. Algunas son simplemente test mode, init o combinaciones de servicio.

Modelo	Combinacion publicada
01W / 01W-FD	RESET + COMPARE + Power
A1	WRITE + -1 + Power
A2 / A3	DOWN + UP + Power, then E/YES
A4	WRITE + BYPASS + Power
AM8000-R	FX1 + FX2 + Power
C-505	MIDI/TRANPOSE + SPLIT + restart
DDD-1	YES + NO + Power
DL8000-R	MS/D + HOLD + Power
DS-8 / 707	UP + DOWN + Power
I1	PROGRAM + DISK + Power
I2 / I3	ARR PLAY + EDIT STYLE + Power
I30	ARRANGE PLAY + GLOBAL + Power
I4S	ARR.PLAY + PROGRAM + Power
I5M / I5S	ARR.PLAY + GLOBAL + Power
IH	DETUNE + BASS + Power
IS40/50/I40M	ARR.PLAY + GLOBAL + Power
KARMA	ENTER + 0 + Power
M1	INT + CARD + COMBI + Power
M1R	INT + PROG + COMBI + Power
M3R	Page 5D of GLOBAL mode
N264 / N364	ENTER + 7 + Power
05R/W	+1 + -1 + Power
SG-PROX	PROGRAM + PIANO 1 + Power
SG-RACK	EDIT + A4 + Power
T Series	lower keypad 0 + PROG A + Power; then immediately power off

Modelo	Combinacion publicada
TR-RACK	EDIT + A4 + Power
TRITON / Rack	ENTER + 0 + Power
TRITON Extreme	0 + ENTER + Power (Initialize)
X3 / X3R	ENTER + CURSOR DOWN + Power
X5 / X5D / X5DR	+1 + -1 + Power
Z1 / Z1EX	SW1 + SW2 + Power

Criterio de lectura

Inicializacion/Test: borra o reinicia parametros, o entra en diagnostico. Puede ser destructivo.

Factory preload/reset: repone programas/presets/datos de fabrica; en muchos equipos antiguos requiere discos, tarjetas o SysEx.

ROM/version: comprobaciones de integridad o version; no equivalen a un reset.

Discrepancias: la lista comunitaria y la guia de servicio no siempre coinciden. En esos casos se ha priorizado para "Factory preload" la lista oficial de KORG UK y se han mantenido las combinaciones historicas en una seccion separada.

Fuentes

- KORG UK Support - Factory Preload List (actualizada en 2026): support.korg.co.uk, articulo "Factory Preload List".
- Manualzz - Korg Initialization, Preload and ROM Check Guide (compilacion de procedimientos de servicio para modelos legacy).
- Oname Project - "YAMAHA/KORG/Roland TESTMODE LIST" (lista comunitaria historica, actualizacion indicada 2022-04-05).
- Sweetwater - Korg N1/N5 reset/preload: confirma que ENTER+7 es test/init y que el Factory Reset normal esta en Utility.

Documento preparado el 25-08-2026. La informacion de equipos legacy puede variar por revision de hardware/firmware; si una combinacion no coincide con el panel de tu unidad, consulta el manual de servicio exacto antes de ejecutarla.